


PROFILE

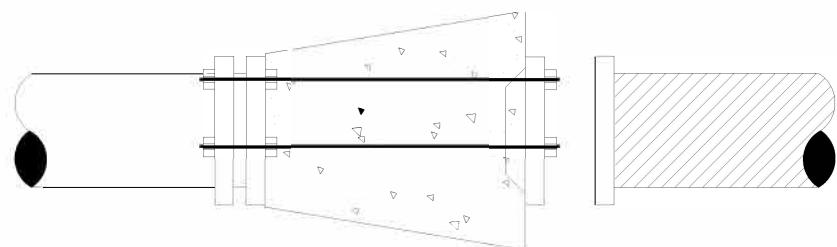

PLAN

AT EXISTING VALVE OR FITTING

SEQUENCE OF CONSTRUCTION:

1. RESTRAIN VALVE OR FITTING. CONTRACTOR TO PROVIDE TEMPORARY RESTRAINT AS REQUIRED. (REQUIRES LINE SHUT DOWN)
2. REMOVE EXISTING PIPE FOR NEW CONCRETE PLUG.
3. INSTALL PLUG INTO BELL OF VALVE OR FITTING AND CAP ON END OF EXISTING PIPE TO BE ABANDONED.
4. INSTALL ALL THREAD RODS (3/4" DIA., MIN) AND POUR CONCRETE PLUG.

DATE: 08/24

DRAWN: KHA



CITY OF MARGATE, FLORIDA
DEPARTMENT OF ENVIRONMENTAL
AND ENGINEERING SERVICES

**PIPE TO BE ABANDONED
(LIVE LINE 4" AND
LARGER)**

G-18